



# Guest paging system with coasters / IQ pagers



## Your system consists of:

- One transmitter
- One antenna
- Coasters / pagers
- Charger
- Mains adapter
- Jumper wire (optionally present)

## Transmitter

Remove the transmitter from the packaging and connect the mains adapter to the transmitter (connector on the backside) and the mains outlet. Connect and twist the antenna locknut on the antenna socket. In the setup menu you can change several settings.



Most used settings are: time setting and paging signal.

## Time setting:



- Press "**setup**".
- Enter:

**1379** (password)

- Press "**enter**".
- Press "**menu**" once (hour display starts flashing). Enter the correct hours using the numeric buttons.
- Press "**enter**" once again (minute display starts flashing). Enter the correct minutes using the numeric buttons.

- Press "**enter**" once again (AM/PM display starts flashing).
- Press "**select**" to change from AM to PM.
- Press "**enter**" again to save your time settings (time saved appears in the display).

*If you don't need to make any other changes to your system press "cancel" twice. Your transmitter shows the correct time and is ready to use.*



# Guest paging system with coasters / IQ pagers

## Alert setting coaster / pager:



- Press **"setup"**.
- Enter:

**1379** (password).

- Press **"enter"**.
- Press the **"menu"** button 6 times (set pager alert appears in the display).
- Press the **"select"** button until your favorite alert setting appears.
- Press **"enter"** once (all coasters need to be connected to the loader!) and disconnect the loader from the mains outlet.
- Press **"enter"** once (the signal is sent to the coasters) All coasters will signal the new alert setting as a test.
- Reconnect your loader with coasters to the mains outlet.

If you don't need to make any other changes to your system press **"Cancel"**. twice. The coaster alert signal is set and your system is ready to use.

## Change the numbers on your coasters.

This only goes 1 by 1.

- Put the coasters which numbers you want to change on the loader.
- Enter the actual number of the coaster in the terminal (use 3 digits; for example: 12 = 012). Press **"enter"**.

- Press **"menu"** and enter the new number of the coaster in the terminal (use 3 digits; for example 24 = 024).
- Press **"enter"** and number 012 changes into 024.
- *Example*  
012- enter- menu- 024 – enter.

## Connecting coasters en auto-numbering IQ pagers:

The loading dock is connected to the mains outlet with an adaptor.

If you have more than one stack of coasters and only one adaptor you can use the jump wire to connect an extra loading dock to your adaptor.



Auto-numbering of your IQ pagers:  
Press "prog" for 10 seconds until the beep, release the button en press again for 2 seconds until the beep.

## Calling the coasters / pagers.

If you start using the system take the first coaster (on top of the stack) from the stack. The coaster will signal the alert type you chose in the setup to prove its is ready for using. You can write down the number of the coaster on the order of your customer en give the coaster to your customer. To call your customer just enter the number of the coaster in your terminal en press "send". The coaster will begin to send the alert signals and your customer returns the signaling coaster and receives his order. Put the signaling coaster on top of the stack and it is deactivated and ready for hand out to your next customer.

**For question or assistance please contact us.**

Tel: +31 (0)35 543 07 38  
e-mail: [info@vedesign.com](mailto:info@vedesign.com)